


RESTORE TO EXISTING
GRADE WHEN INSTALLING
SOLID WALL PIPE

REGRADE TO CREATE
SWALE WHEN INSTALLING
PERFORATED PIPE

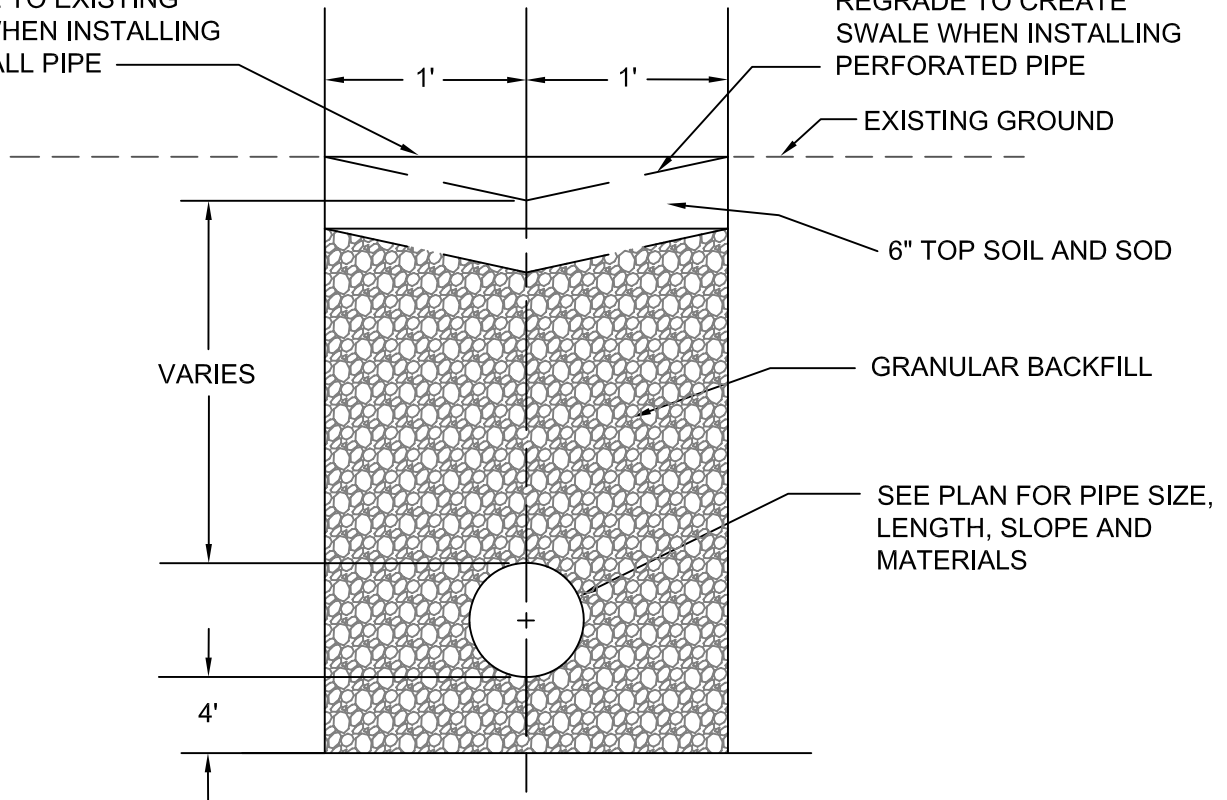

UNDERDRAIN DETAIL

NOTE: THE HOLE FOR THE UNDERDRAIN MUST BE CORE DRILLED INTO THE STRUCTURE.

Village of Mount Prospect

Public Works Department

1700 W. Central Rd.

UNDERDRAIN DETAIL

Last Revised: 8-09